
OXFORD TRUST Wood Centre for Innovation

Aspen Building

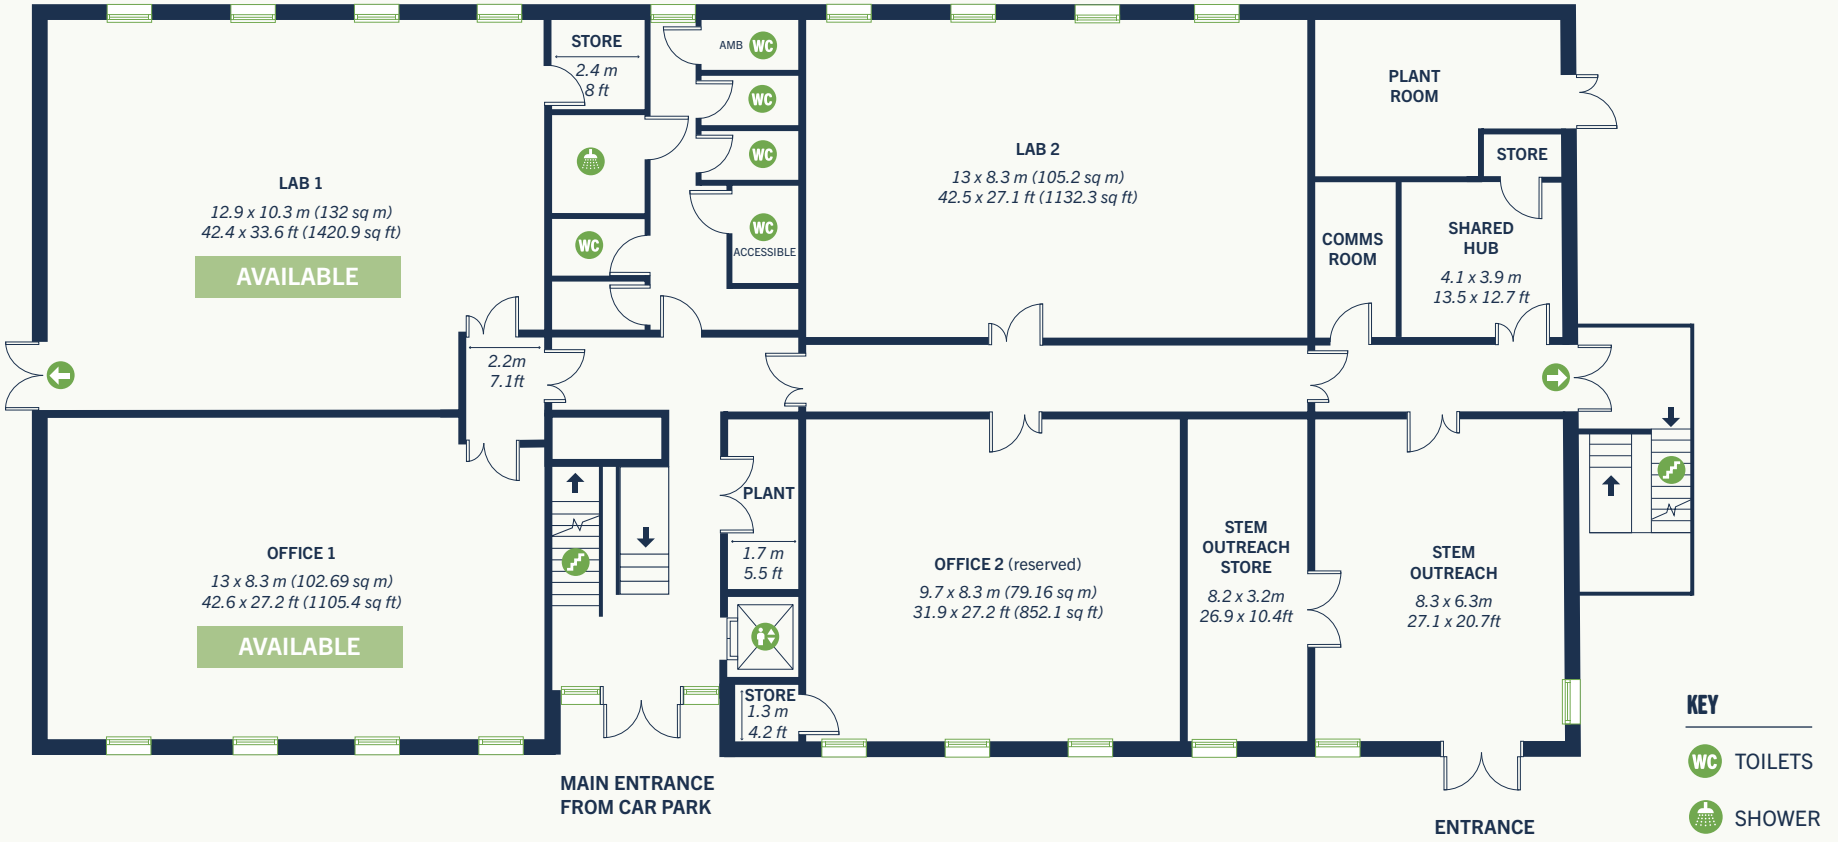

KEY

- WC TOILETS
- SHOWER
- STAIRS
- LIFT
- FIRE EXIT

GROUND FLOOR

OXFORD TRUST Wood Centre for Innovation

Aspen Building



KEY

- WC TOILETS
- SHOWER
- STAIRS
- LIFT
- FIRE EXIT

FIRST FLOOR

OXFORD TRUST Wood Centre for Innovation

Linden Building



KEY

- TOILETS
- SHOWER
- STAIRS
- LIFT
- FIRE EXIT

GROUND FLOOR

LAB 1	149.9 SQM / 1614 SQFT	**LAB 2**	35.7 SQM / 384 SQFT	**LAB 3**	74 SQM / 797 SQFT
LAB 4	31.1 SQM / 335 SQFT	**LAB 5**	45.2 SQM / 487 SQFT	**LAB 6**	92.3 SQM / 993 SQFT
LAB 7	46.1 SQM / 496 SQFT	**LAB 8**	155.4 SQM / 1673 SQFT	**LAB 9**	36.6 SQM / 394 SQFT
LAB 10	50.7 SQM / 546 SQFT	**LAB 11**	30.4 SQM / 327 SQFT	**LAB 12**	14.1 SQM / 152 SQFT

OXFORD TRUST Wood Centre for Innovation

Linden Building



KEY

- WC TOILETS
- SHOWER
- STAIRS
- LIFT
- FIRE EXIT

FIRST FLOOR

F1	36.2 SQM / 390 SQFT	**F3**	97.3 SQM / 1047 SQFT	**F4**	77 SQM / 829 SQFT
F5	97.4 SQM / 1048 SQFT	**F6**	29.2 SQM / 314 SQFT	**F7**	69.9 SQM / 752 SQFT
F8	91.9 SQM / 989 SQFT	**F9**	76 SQM / 818 SQFT	**F10**	77.2 SQM / 831 SQFT
F11	35.6 SQM / 383 SQFT				